



Equalizer leveling Instruction

*This process must be performed at EQ controller, not at Firefly screen

1. Set orientation-Point

1. Power Off
2. Hold Down All Retract Button
3. Turn power on while holding All Retract button. Continue to hold the All Retract button for 5-6 seconds. Should hear fast beeping.
4. Release All Retract button, then push the <Directional> button (See Diagram below). You should hear a confirming beep.
5. All done

2. Set Level 0-Point

1. Manually set trailer at level
2. Power Off
3. Hold down Auto Level button
4. Turn Power on, continue to hold Auto Level button for 5-6 Seconds. Should hear fast beeping
5. Release Auto Level button. Will hear a confirming beep.
6. All Done

Steps 1 & 2 should only need to be completed once. However, in the event of a total battery power loss steps 1 & 2 may need to be repeated.

3. Auto Leveling your Trailer

1. Power On
2. Make sure rear jacks are fully retracted. **Auto level will not function unless the rear jacks are fully retracted. There are 2 Red LED Indicators right above the rear button which will turn off when fully retracted.**
3. Press and release Auto Level button
4. Auto Level process will begin.

PL750 4020: Press Front-UP
PL750 4419:

PL750 3618: Press Rear-UP

